

INSTRUCTIONS FOR INSTALLATION - DELUXWALL

1. SUBSTRATE PREPARATION



The surface of the wall must be prepared, i.e. clean and rough surfaces should be smoothed. It must also be flat, dry, dust-free, oil-based paint free and free of sticker and wallpaper residue. The surface must be protected from moisture, which enables drying.

2. IMPREGNATION COATING / PRIMER

After the substrate is prepared (straightened / smoothed) and dried, at least one layer of undiluted primer must be applied (if the substrate is visible under the primer, apply a second layer).

3. PREPARATION BEFORE INSTALLATION

All Studijo wallpaper motifs are made in such way that the excess can be easily cut from all sides, without losing the complete form of the image. Studijo DeluxWall wallpaper comes in 50 cm wide rolls. They are placed in such way that the glue is applied only to the wall. If you buy the glue yourself, follow the glue manufacturer's instructions for use. It is recommended to use adhesives for textiles and heavy wallpaper. Before installation, check that the wallpaper matches the measurements of your wall and that you have the correct amount of rolls to cover the entire surface.

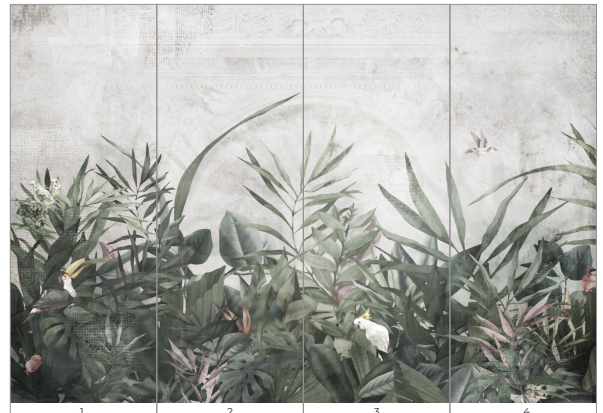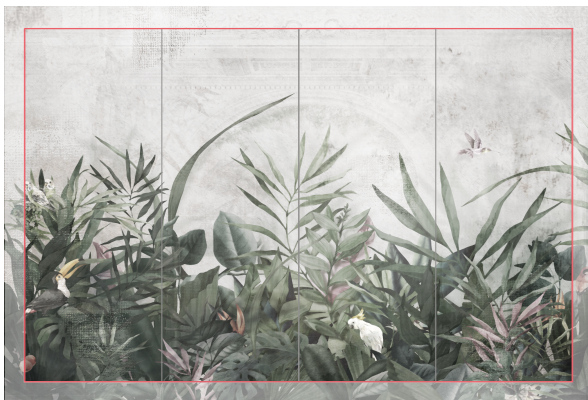


4. INSTALLATION

Studijo wallpapers come marked with serial numbers at the bottom. The rolls are placed next to each other (at zero). Each roll has extra material, 5 cm on the top and 5 cm on the bottom. The first and last roll will also have excess material on the sides. Their dimension depends on the ratio between the wall itself and the number of rolls. After you have checked the material and graphic appearance of the Studijo wallpaper, please proceed to mark the area for positioning the wallpaper in the rolls. Using a laser or tape measure, identify the center of your surface. Depending on the total number of lanes, proceed as follows:



Even number of rolls

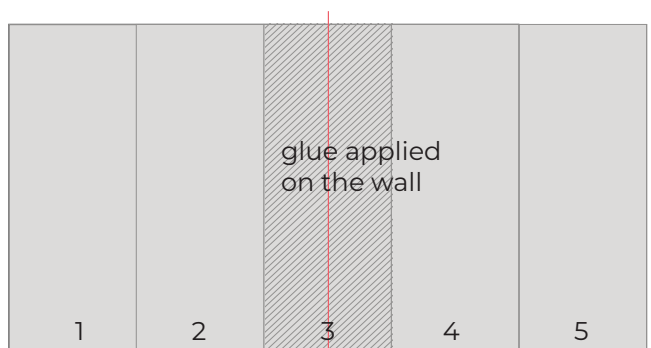

Odd number of rolls

Mix the **glue** with a mixer for paints and glues (a foamer that is suitable for inserting into a drill is also suitable) until the mixture remains free of lumps. Using a roller or brush, apply a layer of adhesive directly to the wall.

It is recommended to place the wallpaper from the center so it wouldn't lose the wholeness of the image. Proper placement of the first roll of the wallpaper ensures the integrity of the image. Mark vertical straight lines on the wall to make it easier to adjust the edges of images (a pencil or laser meter is recommended).



Orange lines indicate material excess and they are not visible on the wallpaper. Red lines are visible on the first and last roll and they mark excess of material. After installing all the rolls, cut and remove the excess material with a sharp scalpel.

MAINTENANCE

Studijo DeluxeWall wallpapers are made of extremely high-quality materials that are easy to maintain with a damp cloth in case of minor soiling. If you want to achieve additional mechanical resistance of the wallpaper, apply a **protective coating** intended for the protection and decoration of interior walls. The coating is used when additional protection of the wall from major soiling is required - in catering, tourism, schools, hospitals, kindergartens, in areas that are in close contact with people.

An important warning!

- Do the installation in a room where there is no draft and at a temperature of 20 C.
- Before installation, spread the wallpaper on the floor and check the correctness of all parts and connections of the rolls.
- If you have any reason to complain, let us know before you install the wallpaper on the wall.
- We are not responsible for mistakes made during wallpaper installation.

Studijo Wallart d.o.o.

Headquarter:
Alberta Ognjana Štrige 19
10000 Zagreb - HR

Showroom:
Charlesa Darwina 4C
10000 Zagreb - HR

Mob: +385 98 348 190
E-mail: info@studijo.co
Web: <https://studijo.co/>